

estesdesigns

MAILBOX AND STREETSCAPES

Aluminum Mounting Bracket Installation Instructions

Contents:

- Aluminum mounting brackets
- Self-tapping screws (4)
- Wood Screws (4)


Tools needed:

- Drill with #2 Phillips bit

Instructions: **WATCH INSTALLATION VIDEO AT: <https://estesmailbox.com/resources/>

1. Before attaching brackets, place your mailbox on the cross arm with mailbox door open.
2. Position mailbox on cross arm so the mailbox door fully opens without hitting the front of the cross arm.
3. Once the mailbox is positioned correctly, make a mark on the side of the post cross arm with a pencil under the pre-drilled mailbox holes you wish to use to mount your mailbox.
4. Remove your mailbox from the post.
5. Place the brackets (and center them side to side) on the post cross arm in line with your pencil marks. Install brackets with bracket legs facing upward (see picture A).
6. Once in place, screw the brackets to the post cross arm using enclosed wood screws (2 per bracket).
7. Once both brackets are attached, place mailbox on post cross arm so the mailbox covers the brackets and you see the aluminum through the holes you previously selected. *
8. Using the (4) zinc-plated self-tapping screws, fasten the mailbox to the bracket (see picture B).

*The self-tapping screws will go through the mailbox mounting hole and into the aluminum bracket. Make sure you apply enough pressure on drill to keep the drill bit from coming off the screw and potentially damaging the mailbox.

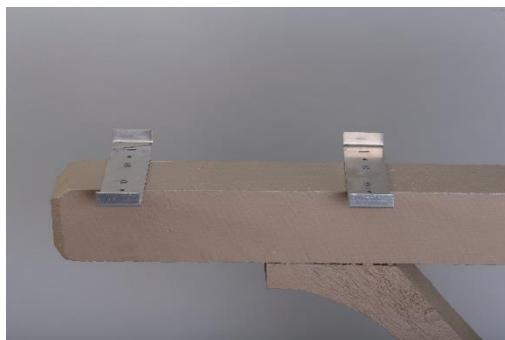

A



B